

Service Description

Over 99% of natural microorganisms can not be isolated and cultured clonally. Traditional isolation and culture-dependent methods have limited the study of microorganisms in their natural environment. Metagenomic studies of genetic material that is directly recovered from environmental samples, have benefitted greatly from advanced NGS technology as a method for the exploration of microbial biodiversity.

BGI's metagenomics survey service applies whole genome shotgun sequencing of DNA isolated from environmental samples, with the advantages of high throughput and high coverage. It can provide information not only on species composition and abundance, but also on functional genes, gene differences between samples, metabolic pathways and gene resource mining for bioactive products.

Sequencing Service Specification

BGI Metagenomic Survey Sequencing services are executed with the DNBSEQ sequencing system.



Sequencing Service

- 150bp Paired-End sequencing
- Date output, Standard and custom Data analysis
- Available Data storage and Bioinformatics applications



Sequencing Quality Standard

- Q20>83%




Turn Around Time

- Typical 40 working days after sample receipt for raw data delivery
- Expedited services are available, contact your local BGI specialist for details

Project Workflow

We care for your samples from the start to the result reporting. Highly experienced laboratory professionals follow strict quality procedures to ensure the integrity of your results.

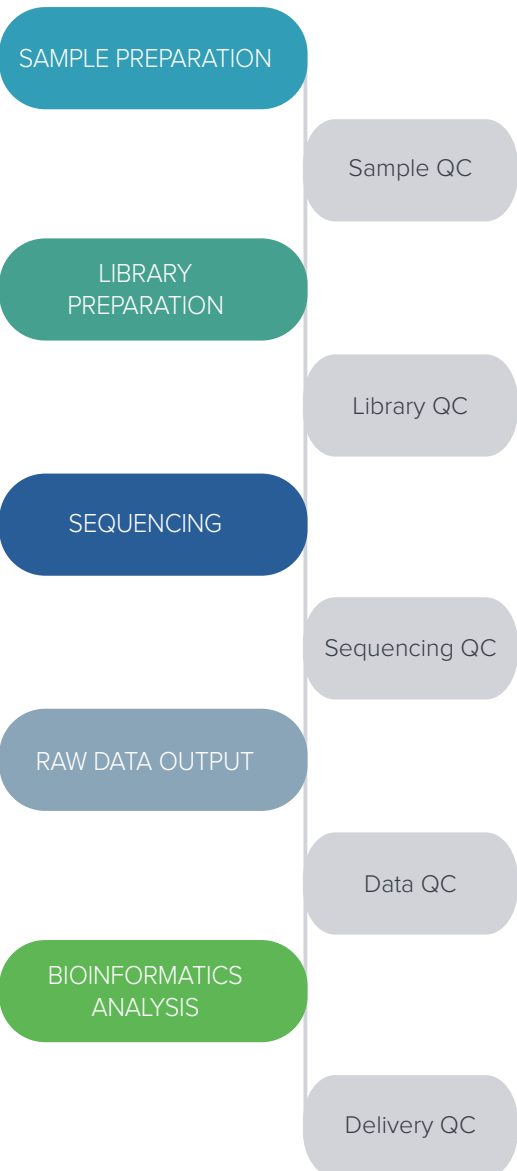

Data Analysis

STANDARD ANALYSIS

- Data filtering
- Alignment
- Metagenomic *De Novo* assembly
- Non-redundant gene catalogue
- Prophage transposable element prediction
- Functional annotation based on KEGG, CAZy, eggNOG, CARD
- Species composition and diversity analysis
- Quantitative and differential analysis of gene abundance
- Principal component analysis

CUSTOMIZED ANALYSIS

Further customization of Bioinformatics analysis to suit your unique project is available: Please contact your BGI technical representative

Sample Requirements

We can process your exacted genomic DNA from a variety of environmental samples with the following general requirements:

	DNA AMOUNT AND CONCENTRATION	MINIMUM SAMPLE VOLUME
Regular	Intact genomic DNA $\geq 1\mu\text{g}$ concentration $\geq 12.5\text{ ng}/\mu\text{L}$	15 μL

References

1. Bäckhed F, Roswall J, Peng Y, et al. Dynamics and Stabilization of the Human Gut Microbiome during the First Year of Life. *Cell Host & Microbe*, 2015. 17(5):690-703. doi:10.1016/j.chom.2015.04.004.
2. Kristoffer F, Falk H, Trine N, et al. Disentangling type 2 diabetes and metformin treatment signatures in the human gut microbiota. *Nature* 528, 262–266 (10 December 2015) doi:10.1038/nature15766.
3. Xiao L, Feng Q, Liang S, et al. A catalog of the mouse gut metagenome. *Nature Biotechnology*, 2015.33(10):1103-8. doi: 10.1038/nbt.3353.

Copyright© 2020 BGI. The BGI logo is a trademark of BGI. All rights reserved.
DNBSEQ is a trademark. of MGI. Co. Ltd All brand and product names are trademarks or registered trademarks of their respective holders. Information, descriptions, and specifications in this publication are subject to change without notice.
Published June 2020.

Services are for research use only.

PN: BGIASO8_092319

Request Information or Quotation

Contact your BGI account representative for the most affordable rates in the industry, to discuss how we can meet your specific project requirements or for expert advice on experiment design, from sample to bioinformatics.

info@bgi.com
www.bgi.com

International Head Offices

BGI Americas

One Broadway,
Cambridge, MA 02142,
USA
Tel: +1 617 500-2741

BGI Europe

Ole Maaløes Vej 3,
DK-2200 Copenhagen N,
Denmark
Tel: +45 7026 0806

BGI Asia

16 Dai Fu Street,
Tai Po Industrial Estate,
New Territories, Hong Kong
Tel: +852 36103510

BGI Australia

L6, CBCRC, 300 Herston
Road, Herston, Brisbane,
Queensland 4006, Australia
Tel: +61 (07) 3362 0475



BGI Genomics



BGI_Genomics

For BGI's scientific publications relating to Metagenomic Survey, sample shipping instructions or sample submission forms, please visit our website.